



Navigation Keys enable the user to intuitively work with the scale's menus and configuration procedures within seconds. Dual TARE keys are located on each side of the unit for greater convenience.

< [Previous](#)