
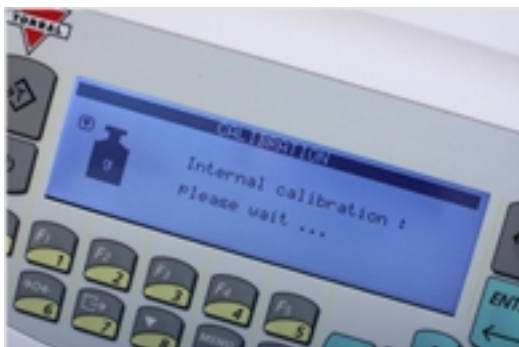
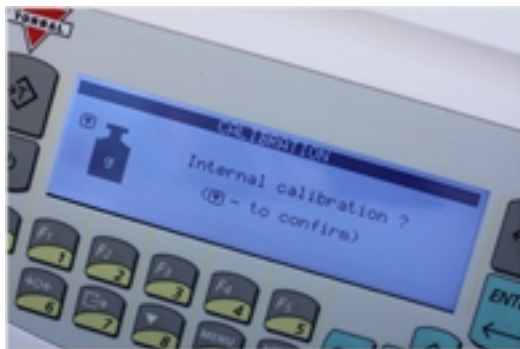


The scale's state-of-the-art self-calibrating mechanism provides optimum weighing accuracy. The scale automatically calibrates itself upon start-up and whenever required by temperature changes. The user can set time intervals for self-calibration as well. This provides the user with confidence about the measurements and eliminates the need for time-consuming external calibration weights.

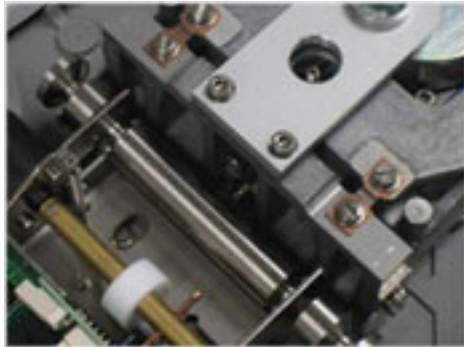

[Next](#) >